

# KPL, KPG and KWM

11-700 kW, 50 Hz DIN; 11-800 kW, 60 Hz DIN

Installation and operating instructions



**KPL, KPG and KWM 50/60 Hz  
DIN**

Installation and operating instructions

Other languages

<http://net.grundfos.com/qr/i/96770326>



## KPL, KPG and KWM

---

### English (GB)

|                                                   |   |
|---------------------------------------------------|---|
| Installation and operating instructions . . . . . | 4 |
|---------------------------------------------------|---|

## English (GB) Installation and operating instructions

### Original installation and operating instructions

#### Table of contents

|                                                                         |           |                                                |           |
|-------------------------------------------------------------------------|-----------|------------------------------------------------|-----------|
| <b>1. Original safety instructions. . . . .</b>                         | <b>0</b>  | <b>12. Storing the product . . . . .</b>       | <b>33</b> |
| <b>2. General information . . . . .</b>                                 | <b>4</b>  | 12.1 Storing in the pit (dry or wet) . . . . . | 33        |
| 2.1 Hazard statements . . . . .                                         | 4         | 12.2 Storing in dry conditions . . . . .       | 33        |
| 2.2 Notes . . . . .                                                     | 5         | <b>13. Fault finding . . . . .</b>             | <b>34</b> |
| 2.3 Target group. . . . .                                               | 5         | <b>14. Technical data . . . . .</b>            | <b>36</b> |
| <b>3. Product introduction . . . . .</b>                                | <b>5</b>  | 14.1 Operating conditions . . . . .            | 36        |
| 3.1 Product description . . . . .                                       | 5         | 14.2 Dimensions and weights . . . . .          | 36        |
| 3.2 Intended use . . . . .                                              | 6         | 14.3 Minimum water levels. . . . .             | 37        |
| 3.3 Identification. . . . .                                             | 6         | <b>15. Disposing of the product . . . . .</b>  | <b>42</b> |
| <b>4. Receiving the product. . . . .</b>                                | <b>7</b>  |                                                |           |
| 4.1 Handling the product . . . . .                                      | 7         |                                                |           |
| 4.2 Lifting the product. . . . .                                        | 7         |                                                |           |
| <b>5. Installation requirements . . . . .</b>                           | <b>10</b> |                                                |           |
| 5.1 Safety information and preparation. . . . .                         | 10        |                                                |           |
| <b>6. Mechanical installation of KPL and KWM . . . . .</b>              | <b>10</b> |                                                |           |
| 6.1 Requirement for free space below the pump . . . . .                 | 11        |                                                |           |
| 6.2 Installing the anchor bolts . . . . .                               | 11        |                                                |           |
| 6.3 Pit construction, KPL and KWM . . . . .                             | 12        |                                                |           |
| 6.4 Installing the column pipe. . . . .                                 | 14        |                                                |           |
| 6.5 Installing the KPL and KWM pump. . . . .                            | 14        |                                                |           |
| 6.6 Installing the cable suspension system in the column pipe . . . . . | 15        |                                                |           |
| <b>7. Mechanical installation of KPG . . . . .</b>                      | <b>18</b> |                                                |           |
| 7.1 Pit construction . . . . .                                          | 19        |                                                |           |
| 7.2 Installing the KPG pump . . . . .                                   | 20        |                                                |           |
| <b>8. Electrical connection . . . . .</b>                               | <b>20</b> |                                                |           |
| 8.1 Wire colours. . . . .                                               | 20        |                                                |           |
| 8.2 Wiring diagrams. . . . .                                            | 21        |                                                |           |
| 8.3 Frequency converter operation . . . . .                             | 22        |                                                |           |
| <b>9. Starting up the product . . . . .</b>                             | <b>23</b> |                                                |           |
| 9.1 Preparations for starting up. . . . .                               | 24        |                                                |           |
| 9.2 Startup. . . . .                                                    | 25        |                                                |           |
| <b>10. Control functions . . . . .</b>                                  | <b>26</b> |                                                |           |
| 10.1 Sensors . . . . .                                                  | 26        |                                                |           |
| 10.2 Pump control . . . . .                                             | 30        |                                                |           |
| <b>11. Servicing the product . . . . .</b>                              | <b>31</b> |                                                |           |
| 11.1 Safety instructions and requirements . . . . .                     | 31        |                                                |           |
| 11.2 Maintenance . . . . .                                              | 31        |                                                |           |
| 11.3 Spare parts . . . . .                                              | 33        |                                                |           |
| 11.4 Contaminated pumps . . . . .                                       | 33        |                                                |           |

## 2. General information



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

### 2.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



#### DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.



#### WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.



#### CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:



#### SIGNAL WORD

##### Description of the hazard

- Consequence of ignoring the warning
- Action to avoid the hazard.

## 2.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.


## 2.3 Target group

These installation and operating instructions are intended for professional installers.

## 3. Product introduction

### 3.1 Product description


KPL pumps are submersible axial-flow propeller pumps.

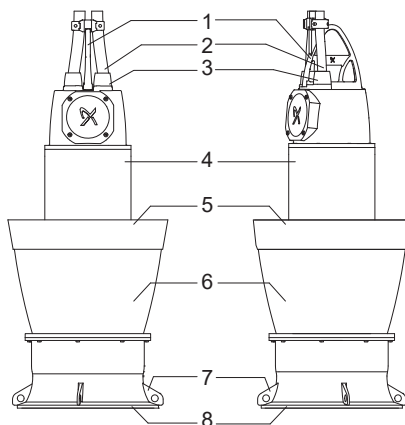

TM055309

*KPL pump*


KWM pumps are submersible mixed-flow pumps.

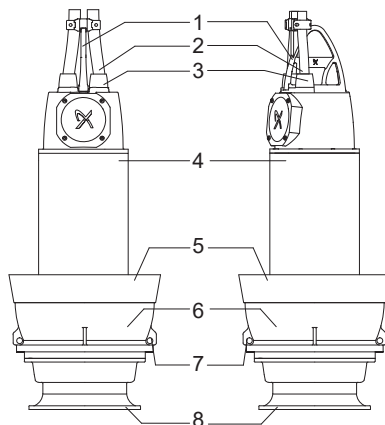

TM055620

*KWM pump*

KPG pumps are gate pumps for submersible installation.

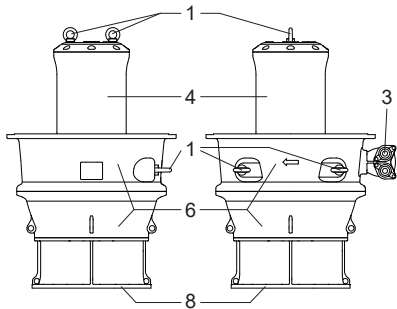

TM074689

KPG pump

| Pos. | Description                                    |
|------|------------------------------------------------|
| 1    | KPL, KWM: Lifting bracket<br>KPG: Lifting eyes |
| 2    | Power supply cables                            |
| 3    | Cable entries                                  |
| 4    | Submersible motor                              |
| 5    | Turbulence optimiser (outlet sealing parts)    |
| 6    | Outlet casing                                  |
| 7    | Anti-rotation bracket                          |
| 8    | Inlet casing                                   |

### 3.2 Intended use

The pumps are specifically designed for pumping stormwater and wastewater in a wide range of municipal and industrial applications, such as:

- flood and stormwater control
- drainage and irrigation
- raw-water intake
- transfer of liquids in large-scale municipal sewage treatment plants
- circulation of large quantities of water in water theme parks, etc.
- circulation of water in fish farms
- water level control in coastal and low-lying areas
- filling and emptying water from dry docks and harbour.

### 3.3 Identification

#### 3.3.1 Type key

Fix the extra nameplate supplied with the pump at the installation site or keep it in the cover of this booklet.

Example of KPL: KPL. 600.19.6.T.50.9.L.40

Example of KPG: KPG. 600.19.6.T.50.9.E.40


Example of KWM: KWM. 600.45.4.T.50.315.M.38

| Code | Description                      | Explanation                |
|------|----------------------------------|----------------------------|
| KPL  | Submersible axial-flow pump      | Pump type                  |
| KWM  | Submersible mixed-flow pump      |                            |
| KPG  | Submersible axial-flow gate pump |                            |
| 600  | DN 600                           | Column pipe diameter       |
|      | Output power P2<br>19 = 19 kW    | Power [kW]                 |
| 6    | 6-pole                           | Number of poles            |
| 4    | 4-pole                           |                            |
| T    | Three-phase motor                | Number of phases           |
| 50   | 50 Hz                            | Frequency                  |
| 9    | 9                                | KPL, KPG: propeller number |
| 315  | Impeller number                  | KWM: impeller number       |
| M    | KWM - Medium head                | Pump range and pressure    |
| L    | KPL - Low head                   |                            |
| E    | KPL KPG - Extra low head         |                            |
| 38   | 380 V                            | Voltage                    |
| 40   | 400 V                            |                            |
| Z    | Custom-built variant             |                            |

Note: Not all variants are available for all pump types sizes.

### 3.3.2 Nameplate

Fix the extra nameplate supplied with the pump at the installation site or keep it in the cover of this booklet.

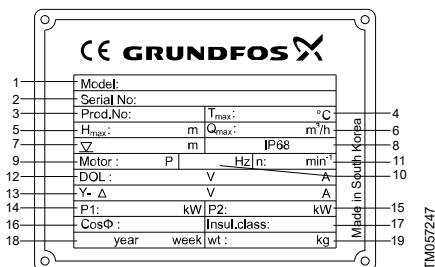

Nameplate

| Pos. | Description                            |
|------|----------------------------------------|
| 1    | Type designation                       |
| 2    | Serial number                          |
| 3    | Product number                         |
| 4    | Maximum ambient temperature            |
| 5*   | Duty-point head                        |
|      | Best-efficiency-point head             |
|      | Maximum head                           |
| 6*   | Duty-point flow rate                   |
|      | Best-efficiency-point flow rate        |
|      | Maximum flow rate                      |
| 7    | Maximum installation depth             |
| 8    | Enclosure class according to IEC 60529 |
| 9    | Number of poles                        |
| 10   | Frequency                              |
| 11   | Rated speed                            |
| 12   | Voltage and current, delta connections |
| 13   | Voltage and current, star connection   |
| 14   | Input power                            |
| 15   | Shaft power                            |
| 16   | Power factor                           |
| 17   | Insulation class                       |
| 18   | Production code, year and week         |
| 19   | Pump weight                            |

\*The values shown for duty-point head and duty-point flow rate are standard. Other values are available on request.

## 4. Receiving the product

Make sure that the pump cannot roll or fall over.

### 4.1 Handling the product

- Make sure that the lifting equipment is appropriate. See section [Lifting the product](#).
- Always lift the pump by its lifting bracket/eye or by a forklift truck, if the pump is fixed on a pallet.
- Observe the maximum cable bending radius. See section [Bending radius of cables](#).

### 4.2 Lifting the product

#### **DANGER**

##### **Crushing hazard**

Death or serious personal injury

- Always check the lifting bracket or lifting eyes and the chain for corrosion or wear before lifting.
- Always lift the pump by its lifting bracket or lifting eyes or by a forklift truck. See fig. [KPL and KWM: lifting points](#) - [KPG: lifting with double wire, step 2](#).



#### **DANGER**

##### **Crushing hazard**

Death or serious personal injury

- Always use certified lifting equipment.
- Note that the cable suspension system is not a certified lifting equipment.
- All lifting equipment must be rated for the purpose and checked for damage before lifting the pump. The lifting equipment rating must not be exceeded.
- The weight of the specific pump is stated on the nameplate.



#### **DANGER**

##### **Electric shock**

Death or serious personal injury

- Never lift the pump by the power cables.



#### **DANGER**

##### **Crushing hazard**

Death or serious personal injury

- Make sure the lifting bracket or lifting eye bolts and the strap is tightened before lifting the pump.




Carelessness during lifting or transportation may cause personal injury or damage to the pump.

If the pump is tilted more than 10° in any direction from its normal position (EN 809, 5.2.1.4), the pump may lose its stability.

**Lifting points**

When lifting the pump, use the right lifting points to keep the pump balanced.

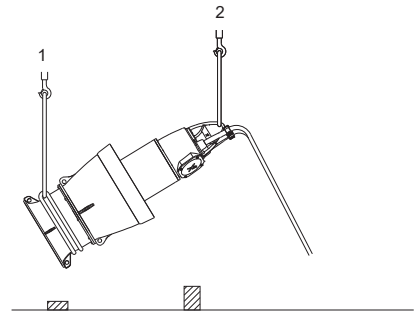

KPL and KWM: lifting points

| Pos. | Description           |
|------|-----------------------|
| 1    | Lifting point, bottom |
| 2    | Lifting point, top    |

**Lifting point, top**

KPL and KWM: use the lifting bracket as the top lifting point. See fig. *KPL and KWM: lifting with single wire*.

KPG: use two top lifting points. See fig. *KPG: lifting with single wire (for transport)*.

**Lifting point, centre (KPG)**


When installing KPG pumps horizontally, use the lifting points on the outlet casing. See fig. *KPG: lifting with single wire connected to both lifting eyes (for installation)*.

**Lifting point, bottom**


Use the pump inlet casing as the bottom lifting point. Lift it by a lifting strap or a lifting chain secured around the pump inlet. See fig. *KPL and KWM: lifting with double wire, step 1* and *KPG: lifting with double wire, step 1*.



Do not lift the pump by the anti-rotation brackets.

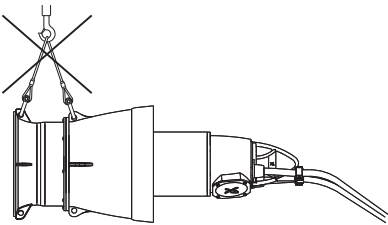


KPL and KWM: anti-rotation brackets

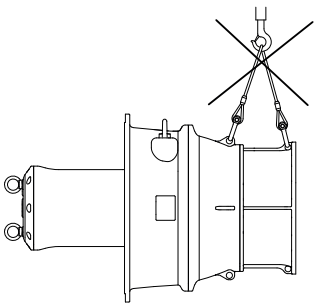


KPG: anti-rotation brackets

**4.2.1 Lifting with single or double wire**


**Lifting with single wire**

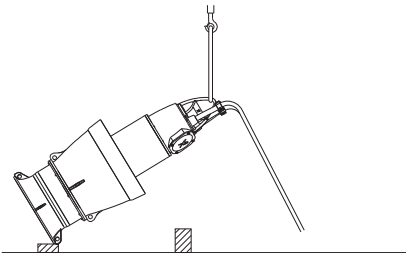


KPL and KWM: lifting with single wire

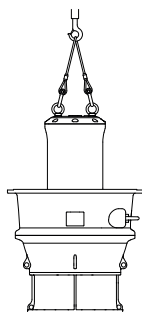


*KPG: lifting with single wire (for transport)*

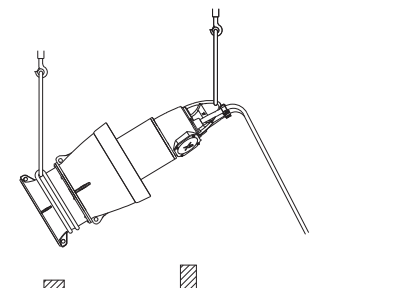

*KPL and KWM: lifting with double wire, step 2*

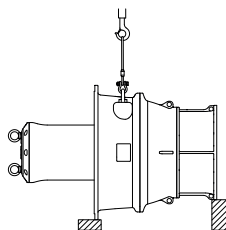

*KPG: lifting with single wire connected to both lifting eyes (for installation)*

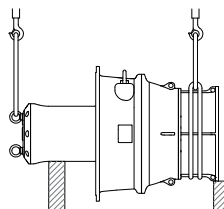


*KPG: lifting with double wire, step 1*




During installation, the KPG motor top is inserted into the gate flange. Therefore, only the lifting method with single wire connected to both lifting eyes can be used for installation.

The lifting eyes in the outlet casing are close to the centre of gravity, so the pump can be lifted in horizontal position without using the lifting eyes on the motor top.

### Lifting with double wire

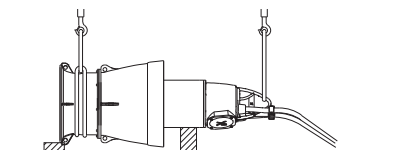

*KPL and KWM: lifting with double wire, step 1*

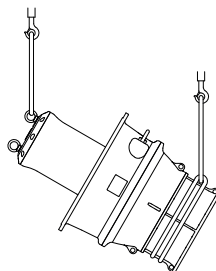

*KPG: lifting with double wire, step 2*

TM074686

TM074686

TM074687

TM074799

TM074688

TM078128

## 5. Installation requirements

### 5.1 Safety information and preparation

- Pump installation in pits must be carried out by specially trained persons.
- Work in or near pits must be carried out according to local regulations.
- For safety reasons, all work in pits must be supervised by a person outside the pit.

#### **DANGER**

##### **Electric shock**

Death or serious personal injury



- It must be possible to lock the main switch in position 0. Type and requirements as specified in EN 60204-1, 5.3.2.

#### **CAUTION**

##### **Crushing hazard**

Minor or moderate personal injury



- Wear personal protective equipment when working on the product.

#### **CAUTION**

##### **Biological hazard**

Minor or moderate personal injury



- Flush the pump thoroughly with clean water and rinse the pump parts after dismantling. Pits for submersible drainage and effluent pumps may contain drainage or effluent with toxic and/or contagious substances.
- Wear appropriate personal protective equipment and clothing.
- Observe the local hygiene regulations in force.

When the pump is completely submerged, it is sufficiently cooled by the surrounding liquid. In addition to the pump, the following items are required and must be ordered separately:

- A cable suspension system for securing the cables.
- Control equipment, for example MP 204.
- KPL and KWM: A column pipe with a seat ring and integrated anti-rotation brackets on which the pump is standing. The seat ring can be supplied with the pump as an installation accessory.
- KPG: A gate with a flange connection that corresponds to the outlet flange of the KPG.

## 6. Mechanical installation of KPL and KWM

#### **DANGER**

##### **Electric shock**

Death or serious personal injury



- Before installation, switch off the power supply and lock the main switch in position 0.
- Before working on the pump, switch off any external voltage connected to the pump.



Observe all safety regulations at the installation site.

Observe the maximum cable bending radius. See section [Bending radius of cables](#).


Prior to installation, check the oil level in the oil chamber. See section [Checking and changing the oil](#).

Make sure that the pump is aligned with the anti-rotation brackets and cannot rotate when the impeller runs.


## 6.1 Requirement for free space below the pump

The following table indicates the column pipe diameter ( $\varnothing D$ ) and the minimum free space allowed (C) under the pump. For further information on installation, see fig. *KPL: installation dimensions* and *KWM: installation dimensions*.

| KPL                     |           | KWM                     |           |
|-------------------------|-----------|-------------------------|-----------|
| $\varnothing D$<br>[DN] | C<br>[mm] | $\varnothing D$<br>[DN] | C<br>[mm] |
| 500                     | 250       | -                       | 300-      |
| 600                     | 300       | 600M                    | 300       |
|                         |           | 600H                    | 300       |
| 650                     | 325       | -                       | -         |
| 700                     | 350       | 700                     | 350       |
| 800                     | 400       | 800M                    | 400       |
|                         |           | 800H                    | 400       |
| 900                     | 450       | 900                     | 450       |
| 1000                    | 500       | 1000M                   | 500       |
|                         |           | 1000H                   | 500       |
| 1200                    | 600       | 1200                    | 600       |
| 1400                    | 700       | 1400                    | 700       |
| 1500                    | 750       | 1600                    | 800       |
| 1600                    | 800       | -                       | -         |
| 1800                    | 900       | -                       | -         |

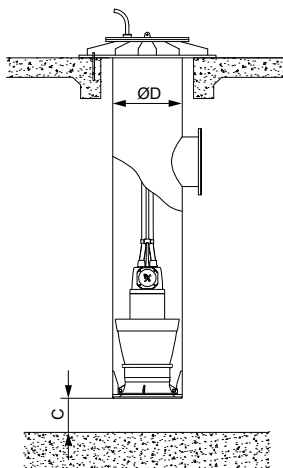

*KPL: installation dimensions*

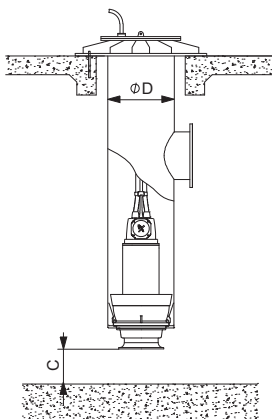

*KWM: installation dimensions*



## 6.2 Installing the anchor bolts

As part of the construction work, the anchor bolts must be installed before the concrete is poured. If this cannot be accomplished, mark out and install the anchor bolts during the installation of the column pipe.

TM055306

TM055597



# 6.3 Pit construction, KPL and KWM

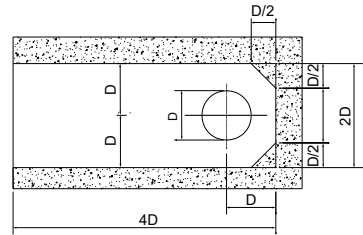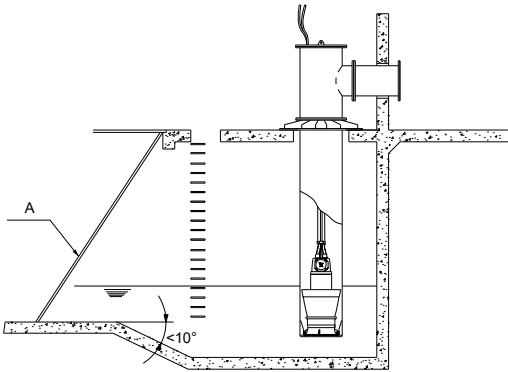

TM074055



## Pos. Description

A Screen

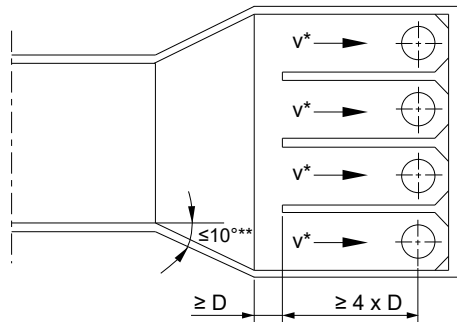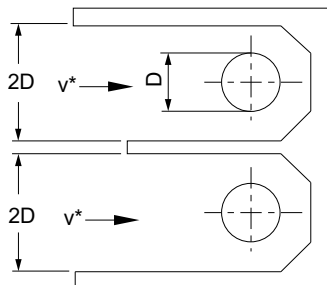

TM073747

\*\*\*Recommended value. The angle can change depending on pump size. For more information, contact Grundfos.

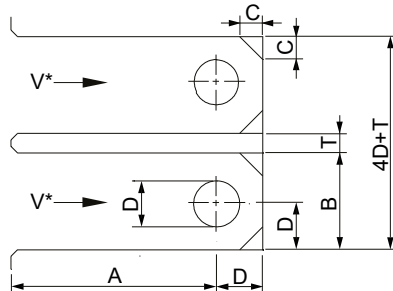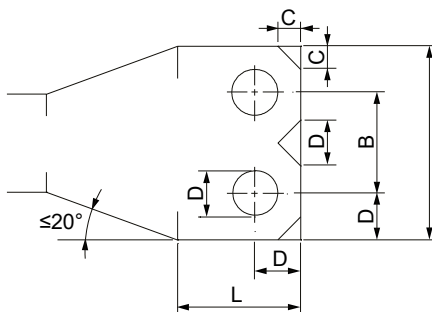

TM073746

\*Flow velocity V:

0.7 m/sec. for storm- and wastewater containing particles.

0.3 m/sec. for screened storm- and wastewater without particles.


#### Dimensions

| D*<br>[mm] | A<br>[mm] | B<br>[mm] | C<br>[mm] | W<br>[mm] | L<br>[mm] | T                                              |
|------------|-----------|-----------|-----------|-----------|-----------|------------------------------------------------|
| 500        | 2000      | 1000      | 250       | 2000      | 2000      | Depending on construction,<br>contact Grundfos |
| 600        | 2400      | 1200      | 300       | 2400      | 2400      |                                                |
| 650        | 2600      | 1300      | 325       | 2600      | 2600      |                                                |
| 700        | 2800      | 1400      | 350       | 2800      | 2800      |                                                |
| 800        | 3200      | 1600      | 400       | 3200      | 3200      |                                                |
| 900        | 3600      | 1800      | 450       | 3600      | 3600      |                                                |
| 1000       | 4000      | 2000      | 500       | 4000      | 4000      |                                                |
| 1200       | 4800      | 2400      | 600       | 4800      | 4800      |                                                |
| 1400       | 5600      | 2800      | 700       | 5600      | 5600      |                                                |
| 1500       | 6000      | 3000      | 750       | 6000      | 6000      |                                                |
| 1600       | 6400      | 3200      | 800       | 6400      | 6400      |                                                |
| 1800       | 7200      | 3600      | 900       | 7200      | 7200      |                                                |

\*D = pipe diameter DN

## 6.4 Installing the column pipe

1. Fit a waterproof sealing between the mounting flange and the concrete support. See fig. [Position of the waterproof sealing](#).

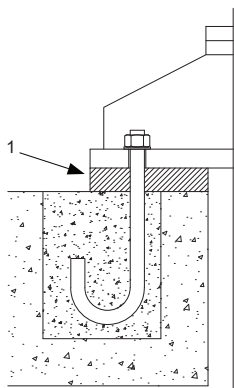

TM055307

Position of the waterproof sealing

| Pos. | Description        |
|------|--------------------|
| 1    | Waterproof sealing |

- |   |                    |
|---|--------------------|
| 1 | Waterproof sealing |
|---|--------------------|
2. Slowly lower the column pipe into the pit using overhead lifting equipment.
  3. Make sure that the column pipe is vertical and fastened to the concrete.
  4. Tighten the anchor bolt nuts to ensure that the column pipe cannot move.

## 6.5 Installing the KPL and KWM pump

Make sure that the pump is aligned with the anti-rotation brackets and cannot rotate when the impeller runs.

Wrong direction of rotation results in damage to the pump.



- Check the direction of rotation before the installation. See section 5.1.1 [9.1.1 Checking the direction of rotation](#)
- The use of a phase detection equipment, such as the MP 204, protects the pump from starting if the phase sequence is changed.

1. Make sure that the sealing O-ring is clean and located in the groove on the bottom of the inlet casing (KPL) or outlet casing (KWM). The O-ring seals between the pump and the seat ring to prevent backflow.
2. Slowly lower the pump into the column pipe using the overhead lifting equipment. If necessary, use an intermediate lifting ring.
3. Carefully guide the pump into position at the bottom of the column pipe, so the pump does not tilt in any way on the stop vanes at the bottom of the column pipe.
4. Lift the pump 2 or 3 cm and turn it counter-clockwise until the anti-rotation brackets touch the nearest adjacent stop vanes.



The pump is secured by its own weight against the anti-rotation brackets. No additional fastening is required.



Turbulence optimisation is not possible if the pump is mounted in an oversize column pipe.

### DANGER

#### Crushing hazard

Death or serious personal injury



- Do not put your hands or any tools into the pump inlet or outlet after the pump has been connected to the power supply, unless the main switch has been locked in position 0.

## 6.6 Installing the cable suspension system in the column pipe



If the pump is configured for side discharge, locate the cable inlet opposite the water outlet.

Disruption in the direction of water flow may cause damage to the cable.

To avoid cable damage, do not position the cable inlet in the column pipe near the water outlet.

Follow these instructions and secure the cables properly:


1. Clamp the wire rope and all cables together. Make sure there is 0.5 m distance between the clamps adapted to the weight of the cables. See fig. [Securing the cables to the lifting wire](#).
2. Fasten the wire rope to the eye at the top of the column pipe.
3. Adjust the turnbuckle between the wire rope and the eye of the beam. Make sure there is no slack in the cable suspension, the cables are fixed to it and cannot move during operation.
4. Lead the cables through the cable bushing of the column pipe.
5. Run the cables to the external terminal box. Make sure that the cable bushing is fitted correctly and prevents water from entering.
6. Fit the top cover on the upper part of the column pipe using a waterproof gasket, then tighten the bolts. Make sure that the cover prevents water from entering.

## Cable suspension system



A cable suspension system is mandatory to avoid cable damage during operation.


The figure below indicates a principle sketch only - the cable suspension system may be adapted to the specific pump type.

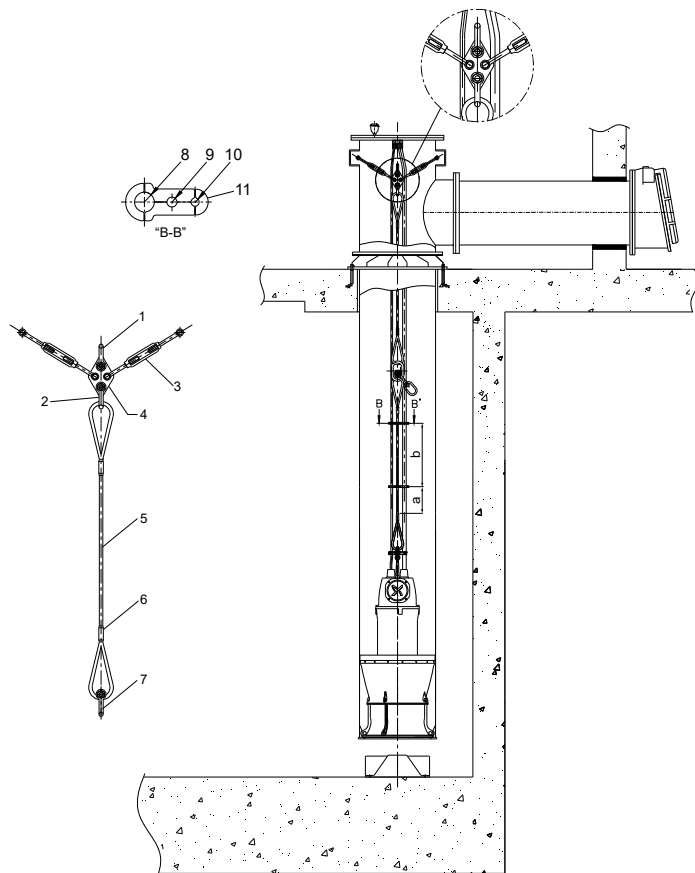

*Securing the cables to the lifting wire*

TM055940

| Pos. | Description  |
|------|--------------|
| 1    | Shackle 1    |
| 2    | Shackle 2    |
| 3    | Turnbuckle   |
| 4    | Wire holder  |
| 5    | Wire rope    |
| 6    | Wire clamp   |
| 7    | Shackle 3    |
| 8    | Power cable  |
| 9    | Wire rope    |
| 10   | Sensor cable |
| 11   | Cable clamp  |
| a    | 300 mm       |
| b    | 500 mm       |

 

TM077742

*Intermediate lifting ring (optional)*

| Pos. | Description |
|------|-------------|
| 1    | Master link |

## 7. Mechanical installation of KPG

### **DANGER**

#### **Electric shock**

Death or serious personal injury



- Before installation, switch off the power supply and lock the main switch in position 0.
- Before working on the pump, switch off any external voltage connected to the pump.




Observe all safety regulations at the installation site.

Observe the maximum cable bending radius. See section *Operating mode*.

Prior to installation, check the oil level in the oil chamber. See section *Checking and changing the oil*.

## 7.1 Pit construction

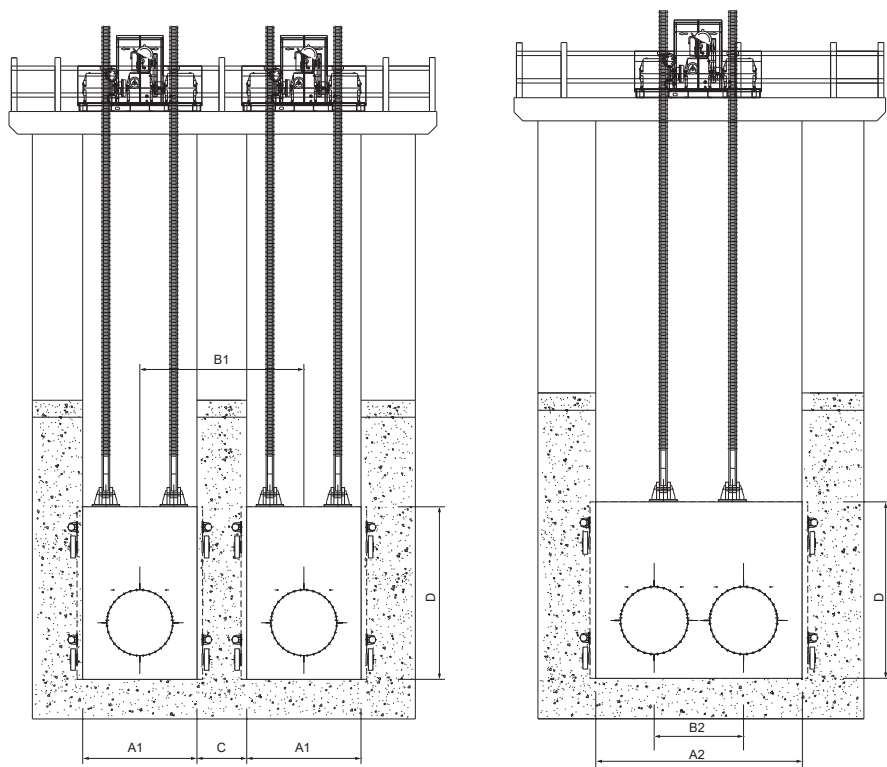

TM074713

| Pump type | Outlet diameter | 1 gate and 1 pump |            |           | 1 gate and 2 pumps |            |
|-----------|-----------------|-------------------|------------|-----------|--------------------|------------|
|           |                 | A1<br>[mm]        | B1<br>[mm] | C<br>[mm] | A2<br>[mm]         | B2<br>[mm] |
| KPG.500   | DN 500          | 1250              | 1950       | 900       | 1900               | 900        |
| KPG.600   | DN 600          | 1400              | 2100       | 900       | 2200               | 1000       |
| KPG.700   | DN 700          | 1500              | 2200       | 900       | 2400               | 1100       |
| KPG.800   | DN 800          | 1800              | 2500       | 900       | 2800               | 1300       |
| KPG.900   | DN 900          | 1900              | 2600       | 900       | 3000               | 1400       |
| KPG.1000  | DN 1000         | 2100              | 2800       | 900       | 3300               | 1600       |
| KPG.1200  | DN 1200         | 2600              | 3300       | 900       | 4000               | 2000       |
| KPG.1400  | DN 1400         | 3000              | 3700       | 900       | 4800               | 2400       |

## 7.2 Installing the KPG pump

- Lift the pump horizontally by the lifting eyes on the outlet casing to install it in the gate. See fig. *KPG: lifting with single wire connected to both lifting eyes (for installation)*.
- Use certified lifting equipment only.

Proceed as follows:

1. Make sure the cables are not damaged during the installation.
2. Make sure the lifting eye bolts are correctly installed and tightened before lifting the pump.
3. Lower the pump in front of the gate and make sure the centre line of the pump is level with the centre line of the flange on the pump gate.
4. Make sure the rubber gasket at the gate flange is correctly positioned.
5. Position the motor on the gate flange.
6. Slide the pump onto the gate flange.
7. When the pump is in place and the holes in the pump and gate flanges are aligned, bolt the two flanges together.
8. Secure the cables to a flexible cable tray.
  - Make sure the cables can adapt to the different positions of the gate without being damaged.
  - The cables are heavy. Make sure the stress on the cables is taken by a flexible cable tray.

### DANGER

#### Crushing hazard

Death or serious personal injury

- Do not put your hands or any tools into the pump inlet or outlet after the pump has been connected to the power supply, unless the main switch has been locked in position 0.



## 8. Electrical connection



Make sure the electrical connection complies with the local regulations.

The supply voltage and frequency are marked on the nameplate. Make sure that the motor is suitable for the power supply available at the installation site.


Connect the pump to an external main switch ensuring all-pole disconnection with a contact separation according to EN 60240-1, 5.3.2.



The pump must be connected to a motor-protective circuit breaker, such as MP 204. A phase-sequence relay is recommended, if the phase sequence of the power supply is changed.

Connect P1, P2 and P3 in series with the thermal protectors and moisture sensors. See section *Wiring diagrams*.

### 8.1 Wire colours

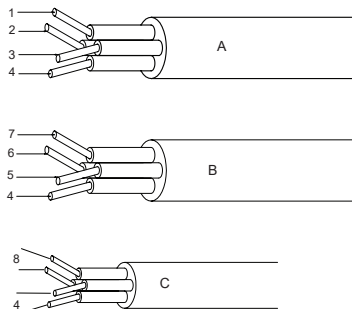


Wire colours, direct-online-starting, two power cables

| Pos. | Description            |
|------|------------------------|
| A    | Primary power cable    |
| B    | Secondary power cable  |
| C    | Sensor cable           |
| 1    | U1 (red)               |
| 2    | W1 (black)             |
| 3    | V1 (white)             |
| 4    | Earth (yellow / green) |
| 5    | V2 (white)             |
| 6    | W2 (black)             |
| 7    | U2 (red)               |
| 8    | 1 to 8 (11) (white)    |


The use of 8-core and 11-core sensor cables are specified according to the sensor options.

## 8.2 Wiring diagrams

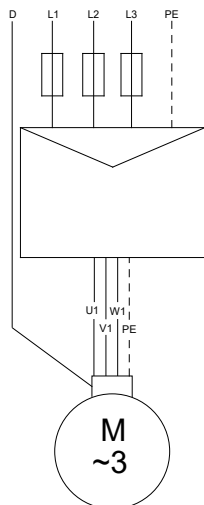


*Direct-online-starting, one power cable*

TM056180

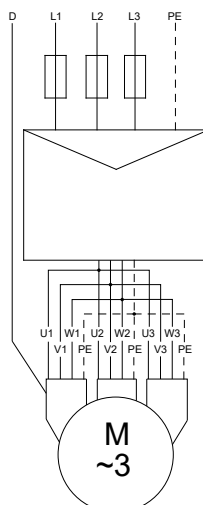


*Direct-online-starting, three power cables*

TM056182

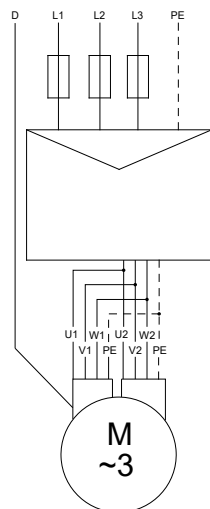


*Direct-online-starting, two power cables*

TM056181

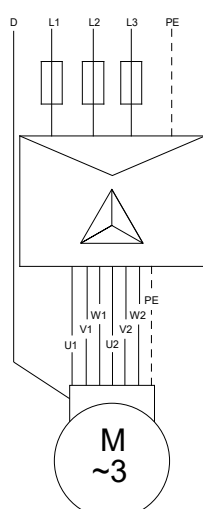

*Star-delta starting, one power cable*

TM056183

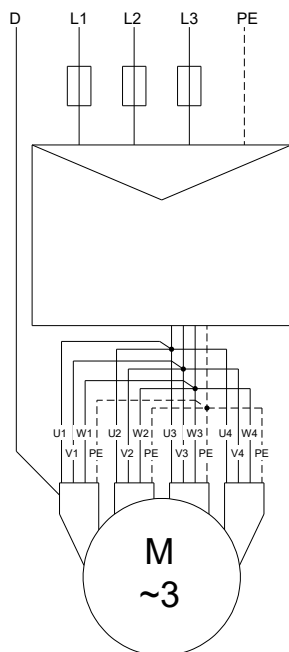

TM086220

Star-delta starting, four power cables

| Pos. | Description  |
|------|--------------|
| D    | Sensor cable |



The earth lead is a green cable marked yellow/green and labelled "PE".



To avoid overload of the motor of KPG LB and KPG EB with bi-directional operation, make sure the pump and flow are stopped before changing the direction of rotation.

### 8.3 Frequency converter operation

All KPL, KPG and KWM pumps can be connected to a frequency converter if an output filter is installed between the converter and the motor. In case a filter is not installed, please contact Grundfos.

Pumps can be connected ideally to a Grundfos CUE, or a soft starter, depending on choice.

When pumps are connected to a frequency converter pay attention to the motor insulation system.

The minimum frequency depends on the type of application and the design of the discharge piping. Always consider the following when determining the minimum frequency:

- mass of the water above the propeller
- the force required to keep valves open
- the velocity reaction forces.

These factors vary from case to case. The minimum frequency has to produce the necessary torque and force from the impeller and propeller to overcome the above mentioned factors.

In environments with high content of sand, for example water treatment plants, a self-cleaning velocity of at least 1 m/s must be ensured in the column's largest diameter.

Ramp down over 30 seconds is recommended to the minimum frequency of positive flow.

The thermal protection of the motor must be connected.

The peak voltage and dU/dt must be in accordance with the table below. The values stated are maximum values supplied to the motor terminals. The cable influence has not been taken into account. See the frequency converter data sheet regarding the actual values and the cable influence on the peak voltage and dU/dt.

| Maximum repetitive peak voltage<br>[V] | Maximum dU/dt $U_N$ 400 V<br>[V $\mu$ sec.] |
|----------------------------------------|---------------------------------------------|
| 850                                    | 2000                                        |

Set the frequency converter U/f ratio according to the motor data.

Local regulations and standards must be complied with.

### 8.3.1 CUE or VFD

The optional CUE or VFD, which is either a Grundfos variable-frequency converter or a general variable frequency converter, offers better pump protection and a more steady flow through the pipe system.

In addition, Grundfos CUE and VFD offer these features:

- anti-blocking
- automatic energy optimization
- specific-energy test
- output frequency
- monitoring of:
  - voltage\*
  - current\*
  - phase sequence\*
  - power\*
  - energy\*
  - torque\*
- reverse start.


Note: reverse start results in damage to the pump and column pipe.

- run flushing
- stop flushing
- PID control.


\* These functions are only available with Grundfos CUE.

## 9. Starting up the product

The pump can be started by either direct-online-starting, star-delta starting, soft starter or frequency converter. For the wiring of the start-stop circuit, see fig. [Direct-online-starting](#) or [Star-delta starting](#).

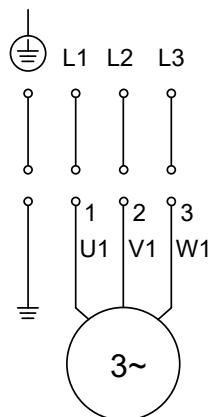

*Direct-online-starting*

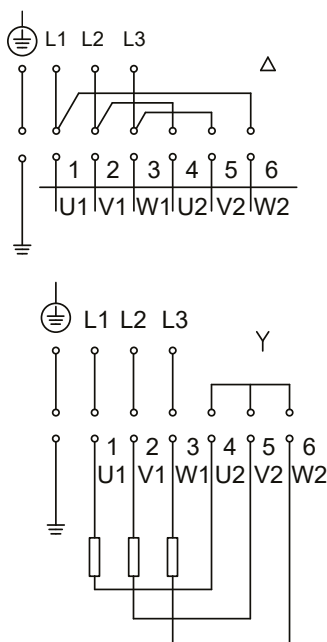

*Star-delta starting*

TM059 167

TM059 168

## 9.1 Preparations for starting up

### **DANGER**

#### **Rotating elements**

Death or serious personal injury



- Before manual startup or changeover to automatic control, make sure that no persons are working on or near the pump.

- Turn the propeller or impeller by hand to make sure the propeller or impeller can rotate freely. See fig. *Direction of jerk and rotation*.
- Make sure that the supply voltage and frequency correspond to the values stated on the nameplate. If not, do not start the pump.
- Make sure that the outer cable sheath is intact, so water cannot penetrate to the terminal box. If the original power cables are refitted, cut off a short piece to ensure that the cable entry sealing sleeve does not clamp around the cable.
- Make sure that the cable entry bushing and the washers correspond to the outside diameter of the power cables. When preparing the power cable conductors for connection to the pump and the terminal box, ensure that the earth conductor is at least 50 mm longer than the other conductors. This is substantial in case a cable is pulled out unintentionally, so the earth conductor connection is the last to be disconnected.
- Check the direction of the rotation. See section *Checking the direction of rotation*.

### 9.1.1 Checking the direction of rotation

Check the direction of rotation before the startup.

### **DANGER**

#### **Electric shock**

Death or serious personal injury



- In case the pump is running with wrong direction of rotation, do not touch the pump or the cables.



KPL and KWM: wrong direction of rotation leads to damage to the pump and the column pipe.



Always check the direction of rotation before the pipe is filled with liquid.

### Method 1 - Free-standing pump

### **DANGER**

#### **Crushing hazard**


Death or serious personal injury



- Never stand under or next to the pump, when it is hanging from a crane.

Proceed as follows:

1. Place the pump on a plain surface.
2. Secure the pump by using the lifting chain and a crane to prevent it from tilting. The pump must rest on the ground without any load on the crane. See fig. *Pump secured with a crane*.

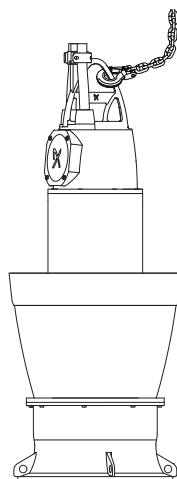

*Pump secured with a crane*

3. Start the pump and let it run for a few seconds.
4. Observe the jerk of the pump. If the pump jerks counterclockwise, the direction of rotation is correct. See fig. *Direction of jerk and rotation*.



The jerk of large pumps can be powerful.

If the direction of rotation is wrong, interchange two phases in the power cable.

TMC69724


## Method 2 - Pump installed in a column pipe

- Make sure the column pipe is not filled with water.
- Make sure the pump is installed correctly. See section *Installing the KPL and KWM pump*.

Proceed as follows:

1. Check the electrical connections with a phase detector to make sure the connections are correct.
2. Start the pump and let it run for a few seconds.
3. Observe the jerk of the pump. If the pump jerks counterclockwise, the direction of rotation is correct. See fig. *Direction of jerk and rotation*.

If the direction of rotation is wrong, interchange two phases in the power cable.

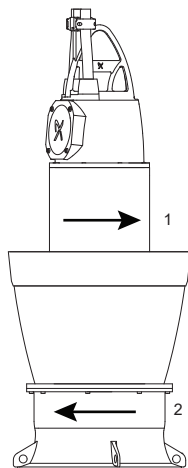

*Direction of jerk and rotation*

| Pos. | Description           |
|------|-----------------------|
| 1    | Direction of jerk     |
| 2    | Direction of rotation |

## 9.2 Startup

### WARNING

#### Automatic startup

Death or serious personal injury



- Before manual startup or changeover to automatic control, make sure that no persons are working on or near the pump.



Do not start the pump before checking the direction of rotation.



Always operate the pump in accordance with established routines with scheduled checks. Ensure that the pump and equipment settings cannot be changed by unauthorised persons.

Proceed as follows:

1. Lock the main switch in position 0.
2. Check the oil level in the oil chamber.
3. Make sure that the monitoring units are operating appropriately.
4. Make sure that the pump is submerged in the liquid.
5. Open the isolating valves, if fitted.
6. Check the setting of the level switches.
7. Unlock the main switch, start the pump and check the pump operation for abnormal noise or vibrations.

When started, the pump jerks counterclockwise.



In case of abnormal noise or vibrations, stop the pump immediately. Do not restart the pump until the cause of the fault is identified and eliminated.

8. After startup, establish the actual pump duty point.

TMO39466


# 10. Control functions

## 10.1 Sensors


The table shows the difference between standard product and factory product variant (FPV) and the number of sensors. FPV sensors can be chosen individually.

| Sensor                             | Type     | Number of sensors |     |
|------------------------------------|----------|-------------------|-----|
|                                    |          | Standard          | FPV |
| Stator thermal protection          | Bi-metal | 3                 | 3   |
| Stator thermal protection          | Pt100    | 1                 | 3*  |
| Terminal box moisture sensor       | Switch   | 1                 | 1   |
| Motor housing moisture sensor      | Switch   | 1                 | 1   |
| Bearing thermal protection (lower) | Pt100    | 1                 | 1   |
| Bearing thermal protection (upper) | Pt100    | 1                 | 1   |
| Water-in-oil sensor (WIO)          | Analog   | -                 | 1   |
| Vibration sensor                   | Analog   | -                 | 1   |


\*Three Pt100 sensors are installed in the windings at the factory, but only one sensor is connected as standard. All 3 stator thermal sensors can only be connected with the bearing sensors when SM113 is installed in the motor top.

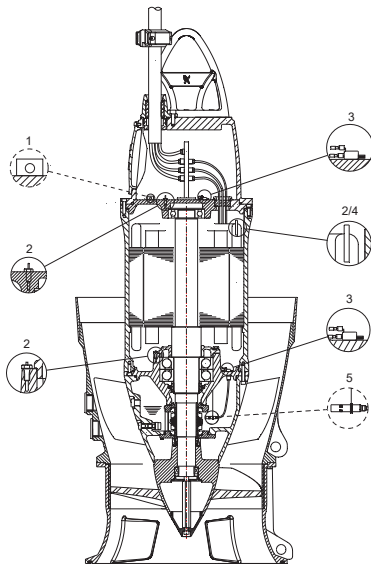

KPL: switches and sensors

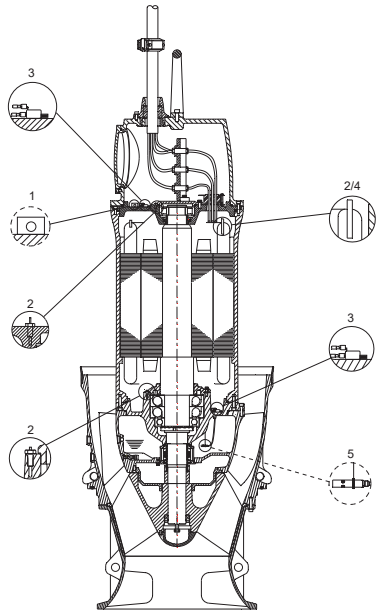

KWM: switches and sensors

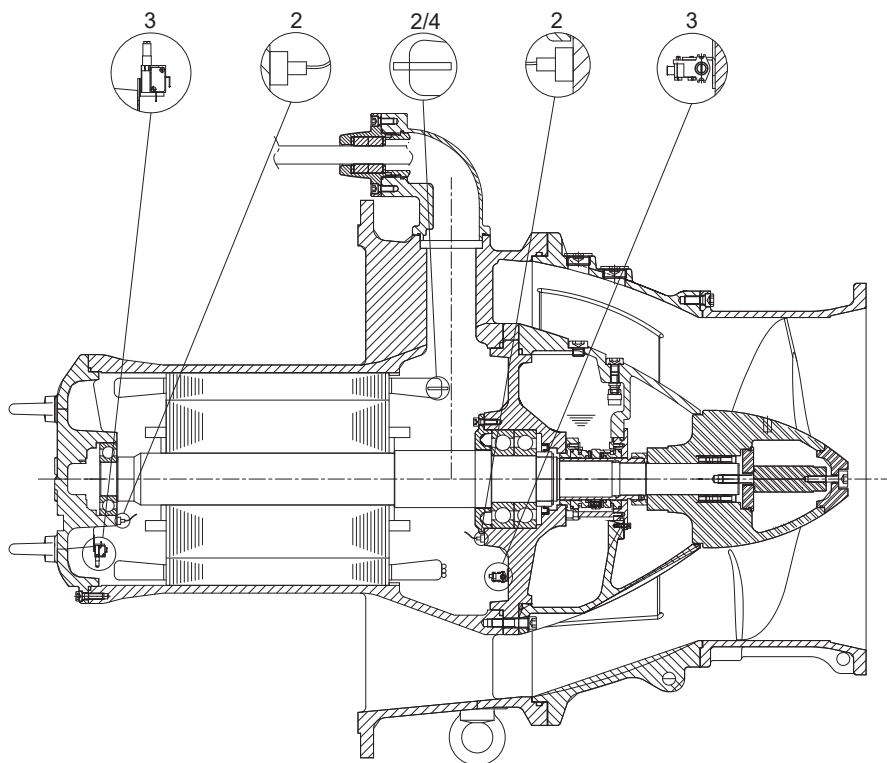

TM074690

*KPG: switches and sensors*

Key for figures: KPL, KWM and KPG: switches and sensors.

| Pos. | Description               |
|------|---------------------------|
| 1    | Vibration sensor          |
| 2    | Thermal sensor            |
| 3    | Moisture switch           |
| 4    | Thermal switch            |
| 5    | Water-in-oil sensor (WIO) |

### 10.1.1 Thermal switches

- Standard pumps incorporate three bimetallic thermal switches built into the stator windings. The thermal switches protect the motor against overheating.
- When the maximum winding temperature is reached, the switch opens the circuit and stops the motor.
- When the windings are cooled down, the switch closes the circuit and the motor can be restarted.



The motor-protective circuit breaker of the pump controller must include a circuit, which automatically disconnects the power supply, if the protective circuit of the pump is opened.

The thermal switches are connected in series in a separate circuit in the control cables. See section [Electrical connection](#).

The thermal switches must be connected to the motor-protective safety circuit in the control cabinet.

Technical data for the thermal switches:

- two conductors
- operating voltage: 12-250 VAC
- maximum switching current: 2.5 A at  $\cos \varphi = 1$ .

### 10.1.2 Pt100 sensor

The sensor is connected in a separate circuit to the power or control cables. See section [Electrical connection](#).

The sensor must be connected to a Pt100 relay in the control cabinet, preferably to a Grundfos SM 113 or IO 113.

The resistance of the sensor varies with the temperature. The table below indicates approximate values.

| [Ω]   | [°C] |
|-------|------|
| 100   | 0    |
| 138.5 | 100  |
| 107.8 | 20   |



Do not use a megohmmeter to test this alarm due to the low resistance of the sensor circuits.

### 10.1.3 Moisture switches

The pumps have two moisture switches:

- one in the terminal box
- one in the lower part of the stator housing.

Moisture switches protect the motor from damage due to moisture.

The moisture switches are non-reversing and must be replaced after being activated.



The motor-protective circuit breaker of the pump controller must include a circuit, which automatically disconnects the power supply, if the protective circuit of the pump is opened.

The moisture switches are connected to a separate circuit through the control cable. See section [Electrical connection](#).

The moisture switches must also be connected to the safety circuit of the separate pump controller.

Technical data of moisture switches:

- two conductors
- operating voltage: 12-250 VAC
- maximum switching current: 2.5 A at  $\cos \varphi = 1$ .

### 10.1.4 Thermal bearing protection

Standard pumps incorporate one Pt100 sensor for analog measurement of the temperature of the lower bearing and one Pt100 sensor for the upper bearing. The sensors are connected in separate circuits to the power or control cables. See section [Electrical connection](#).

The sensors must be connected to a Pt100 relay in the control cabinet, preferably to a Grundfos SM 113 or IO 113.

The resistance of the sensors varies with the temperature. The table below indicates approximate values.

| [Ω]   | [°C] |
|-------|------|
| 100   | 0    |
| 138.5 | 100  |
| 107.8 | 20   |

The following temperature limits are predefined:

- 90 °C: alarm for bearing temperature
- 130 °C: pump stop caused by high bearing temperature.

After installation, check the following:

1. Make sure that the resistance at 20 °C is approximately 107.8 Ω.
  2. Carry out similar measurements at COM1, B/S-L and B/S-H of SM 113 and the power cables. See section [Wiring diagrams](#).
- If SM 113 is installed inside the pump, the measurement must be carried out from SM 113 wirings in the junction box. See figure in the appendix.
  - If SM 113 is installed outside the pump, the measurement must be carried out from SM 113 wirings or end of the control cables. See figure in the appendix.

Connect the Pt100 sensor to a recording device during pump check.



Do not use a megohmmeter to test this alarm due to the low resistance of the sensor circuits.

### 10.1.5 Water-in-oil sensor (WIO) (only KPL and KWM)

The WIO sensor measures the water content in the oil chamber and converts the value into an analog current signal. The two sensor wires are used for supply power and transmit signal to the measuring device or controller. The sensor measures the water content from 0 to 20 %. It also sends a signal, if the water content is outside the normal range (warning), or if the oil level is low (alarm). The sensor is fitted in a stainless steel tube for mechanical protection.

The WIO sensor must be used together with Grundfos IO 113 or SM 113.

Together with IO 113, the WIO sensor filters the signal and provides an easy readout of the actual value. Furthermore, it is possible to set a user-defined warning limit and calibrate IO 113 and the sensor to the motor oil.



Do not use Shell Ondina 420X motor oil, if a WIO sensor is in use.



Lack of oil may cause overheating and damage to the mechanical shaft seals. The WIO sensor trips the alarm, if the quality or quantity of oil is inappropriate in the oil chamber.

The WIO sensor works in the following way:

#### Sensor signals

|         |   |                                                          |
|---------|---|----------------------------------------------------------|
| 4-20 mA | = | 0-20 % water in the oil.<br>Accuracy is better than 2 %. |
| 22 mA   | = | <b>Warning</b><br>The water content is above 20 %.       |
| 3.5 mA  | = | <b>Alarm</b><br>There is air in the oil chamber.         |

#### Technical data

|                     |             |
|---------------------|-------------|
| Input voltage       | 12-24 VDC   |
| Output current      | 3.4 - 22 mA |
| Power input         | 0.6 W       |
| Ambient temperature | 0 to 70 °C  |

### 10.1.6 Pump vibration sensor (PVS 3) (only KPL and KWM)

The PVS 3 sensor is a three-plane vibration sensor that monitors the vibration level to protect the pump and the pipe system against damage. A change in the vibration level indicates an abnormal situation, which may be caused by a clogged impeller, worn bearings or a closed outlet valve. In this case, always inspect the service and carry out the necessary eliminations to avoid damage to the pump or the pipe system.

## 10.2 Pump control

KPL, KPG and KWM pumps can be controlled by:

- Grundfos Dedicated Controls (DC) for one to six pumps
- IO 113
- SM 113
- MP 204.

Note: The controllers are available as accessories.

### 10.2.1 Dedicated Controls (DC)

Grundfos DC is a control system designed for installation in either commercial buildings or network pumping stations with up to six pumps. Grundfos DC system provides advanced control and data communication.

The DC system consists of the following components:

- CU 361 control unit
- IO 351B module (general I/O module)
- IO 113 protection module (optional).

The DC system starts and stops the pumps by:

- float switches
- analog pressure sensors
- ultrasonic sensors.

Furthermore, it is possible to control the water level by combining float switches with an analog pressure sensor. Two additional safety float switches can be installed in the DC system for high-level and dry-running alarm.

### 10.2.2 IO 113

IO 113 forms the interface between a Grundfos storm- or wastewater pump with analog and digital sensors and the pump controller. The most important sensor data are indicated on the front panel. For further information, see the installation and operating instructions for IO 113 on [www.grundfos.com](http://www.grundfos.com).

One pump can be connected to an IO 113.

With the sensors, IO 113 forms a galvanic separation between the motor voltage in the pump and the controller connected.

IO 113 with SM 113 enables the following functions:

- Pump protection against overtemperature
- Sensor monitoring for analog measurement of:
  - motor temperature
  - pump vibrations
  - leakage (WIO)
  - stator insulation resistance
  - bearing temperature
  - digital measurement of moisture in motor
- Stop the pump in case of alarm
- Remote monitoring of the pump by RS485 communication (Modbus or GENIbus).

### Measurement of insulation resistance

IO 113 measures the insulation resistance between a stator winding and earth:

- Resistance above 10 M $\Omega$  = OK
- Resistance between 10 M $\Omega$  and 1 M $\Omega$  = warning
- Resistance below 1 M $\Omega$  = alarm.

### 10.2.3 SM 113

SM 113 is used for collecting and transferring sensor data. SM 113 works together with IO 113 through power line communication using the Grundfos GENIbus protocol.

SM 113 can be placed either inside the pump terminal box (allowing fewer sensor wires out of the pump) or in the control cabinet next to the pump installation.

For electrical connection, Appendix. SM 113 collects data from the following devices:

- 3 current sensors, 4-20 mA
- 3 Pt100 thermal sensors
- 1 PTC thermal sensor
- 1 digital input.

### 10.2.4 MP 204

The motor protector MP 204 is an electronic control unit designed for monitoring and protecting motors, pumps, machines, cables and cable joints.

The MP 204 monitors the following:

- System insulation resistance to earth before start
- Motor temperature (if the motor is fitted with an operational temperature sensor, such as a Pt100/ Pt1000 or a PTC sensor)
- Current consumption and unbalance
- Supply voltage
- Phase sequence
- Missing phase
- Power factor ( $\cos \varphi$ )
- Harmonic distortion
- Starting capacitor (single-phase operation only)
- Run capacitor (single-phase operation only).

The MP 204 protects against:

- Overload
- Dry running in pumping systems
- Incipient motor defect
- Too high motor temperature
- Power supply failure.

As a standard, the MP 204 incorporates:

- Display for reading values, such as current, voltage, temperature,  $\cos \varphi$ , warning and trip codes
- Relay output for external fault indication
- GENIbus connection
- Pt100/Pt1000 sensor input
- PTC/thermal switch input.

## 11. Servicing the product

### 11.1 Safety instructions and requirements

#### DANGER

##### Electric shock

Death or serious personal injury



- Before working on the pump, make sure that the main switch has been locked in position 0.

#### WARNING

##### Crushing hazard

Death or serious personal injury



- Make sure that all rotating parts are stopped moving.



Maintenance and service must be carried out by specially trained people.

### 11.2 Maintenance

The pump must be subjected to a major overhaul in a service workshop every third year. This requires special tools and must be carried out by an authorised service workshop.

Inspect pumps running normal operation twice a year.

Check the following:

- **Visual check:** See section [Visual checks](#).
- **Propeller or impeller clearance:** See section [Inspecting and adjusting the propeller or impeller clearance](#).
- **Oil level and oil condition:** See section [Checking and changing the oil](#).



Inspect the oil

- for pumps in intermittent operation, once a year
- for pumps in permanent operation, every six months.

- **Stator housing:** See section [Checking the stator housing](#).
- **Cable entry:** Make sure that the cable entry is waterproof, the cables are not sharply bent or pinched and the cable sheaths have no visual defects. See section [Checking the cable entry](#).
- **Insulation resistance:** See section [Checking the insulation resistance](#).
- **Pipes:** Make sure that the pipes, valves and other peripheral equipment are intact.



Faults must be repaired and notified to the supervisor.

- **Pump parts:** Check the pump parts, such as the inlet and outlet casing, for possible wear. Replace defective parts.
- **Ball bearings:** Check the shaft for noisy or heavy operation by turning the shaft by hand. Replace defective ball bearings. A general overhaul of the pump is usually required in case of defective ball bearings or poor motor function. This work must be carried out by an authorised service workshop.



Inspect the pump after one week of operation, if the pump is new or the shaft seals have been replaced.

Regular inspection and preventive maintenance ensure reliable operation.

### 11.2.1 Visual checks

Visual inspection includes the following:

- Search for cracks or other external damage.
- Check the lifting bracket or eyes and the lifting chain for wear and corrosion.
- Inspect the power cables for cracks or lacerations in the sheath, for kinks or for other damage.
- Check that the cables are firmly connected to the motor top cover.
- Check that no visible screws have self-loosened and tighten if necessary.

### 11.2.2 Inspecting and adjusting the propeller or impeller clearance

When the clearance between the propeller or impeller blade and the wear ring exceeds 2 mm, replace the wear ring.

For further information, contact Grundfos or the nearest authorised service workshop.

#### KPL and KWM: replacing the wear ring

1. Remove the screws and lift the pump off the inlet casing.
2. Replace the wear ring.
3. Assemble the pump in reverse order.

### 11.2.3 Checking and changing the oil

Check the oil level after one month of operation if the pump is new or the shaft seals have been replaced. The oil must be changed if it contains water.



If the pump is fitted with a WIO sensor, the manual check of the oil level is not needed.

#### CAUTION

##### Pressurised system

Minor or moderate personal injury

- The oil chamber may be under pressure. Loosen the screws carefully and do not remove them until the pressure has been completely relieved.



Pump out all the used oil. After refilling, tighten the oil plug to torque (80 Nm).



Used oil must be disposed of in accordance with local regulations.



An oil change kit (98887554) is available to ease the oil change.

See separate instructions for the oil change kit on Grundfos Product Center.

### 11.2.4 Checking the stator housing

If there is water in the stator housing, the cause may be as follows:

- An O-ring is damaged.
- The cable entry is leaking.

If there is oil in the stator housing, the cause may be as follows:

- The inner seal is damaged.
- An O-ring is damaged.

### 11.2.5 Checking the cable entry

- Check that the cable clamps are tight.
- Check that the cable entry is tight.
- In case of cable inlet disassembly, cut off a piece of the cable, so the rubber bush closes around a new position on the cable. Always use new rubber bushings when reassembling the cable inlet.
- Check that the rubber bushings and the washers fit to the outside diameter of the cables.
- Make sure there is no slack in the cable suspension, the cables are fixed to the cable suspension and cannot move during operation.

In case the outer sheath is damaged, replace the cable.

### 11.2.6 Checking the insulation resistance

IO 113 measures the insulation resistance between a stator winding and earth.

- The resistance is above 10 MΩ: OK.
- The resistance is 1 to 10 MΩ: warning.
- The resistance is below 1 MΩ: alarm.

## 11.3 Spare parts

Always replace damaged motor parts with new and approved ones. Motor parts must not be reconditioned by machining, re-tapping or welding.

For further information about service and spare parts, visit [www.grundfos.com](http://www.grundfos.com).

## 11.4 Contaminated pumps

### CAUTION

#### Biological hazard

Minor or moderate personal injury



- Flush the pump thoroughly with clean water and rinse the pump parts after dismantling.

The pump is classified as contaminated if it has been used for toxic or contagious liquid.

Before returning the product for service, contact Grundfos with details about the pumped liquid.

Otherwise, Grundfos can deny to service the product.

## 12. Storing the product



Leave the cable end protectors and sensor cables on the power until making the electrical connection.

The free cable ends must never be exposed to moisture or water.

For periods of storage, the pump must be protected against moisture and heat. After a period of storage, inspect the pump before putting it back into operation. See section [Storage temperature](#).

### 12.1 Storing in the pit (dry or wet)

The pump is frost-resistant as long as it is operating or submerged in the liquid. If the pit has been pumped dry and the pump has been exposed to the atmosphere, allow the pump to stand submerged in the liquid for a short period before starting it up. This eliminates the possibility of a frozen propeller or impeller. Never use an open flame to thaw out the pump.

If the pump is submerged in liquid, operate it for 30 seconds every month.

### 12.2 Storing in dry conditions



If the pump is stored dry, rotate the propeller or impeller by hand at least bi-monthly to prevent the shaft seals from seizing up.



If the propeller or impeller cannot be turned by hand, contact an authorised service workshop.

During storage, pay attention to the condition of the shaft seals and the cable entries. Clean the pump at regular intervals and spray it with corrosion-inhibiting oil. Always store the pump protected and do not expose it to direct sunlight.

### 13. Fault finding

Before diagnosing any fault, read and observe the safety instructions in section [Safety instructions and requirements](#).

#### DANGER

##### Electric shock

Death or serious personal injury



- Before working on the product, make sure that the power supply has been switched off and it cannot be switched on unintentionally.

| Fault                                                                   | Cause                                                                                      | Remedy                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The pump does not start.                                                | A fault signal is indicated.                                                               | <p>If the bearing temperature is high, take the pump to the workshop for repair.</p> <p>If the stator temperature is high, make sure that the water can move around the stator housing without any obstacles and the propeller or impeller rotates easily.</p> <p>If there is a fault in the thermal protectors, contact an authorised electrician. Check that the overload protection is reset.</p> |
|                                                                         | The pump cannot be started manually.                                                       | <p>Check the control voltage, and if the control fuses are intact.</p> <p>Make sure all connections and fits are correct.</p> <p>Check if the relay and contactor coils are functioning correctly.</p>                                                                                                                                                                                               |
|                                                                         | A fault signal is indicated on the control panel.                                          | <p>Measure if the supply voltage is correct on all phases.</p> <p>Check the main power switch and the fuses. Replace the fuses if necessary.</p> <p>Check if the overload protection reset.</p> <p>Check the power cable for damages.</p>                                                                                                                                                            |
| The pump starts, but the motor protection stops it after a few seconds. | The motor protection is set too low.                                                       | <p>Check the motor data on the nameplate.</p> <p>Adjust the settings of the motor protection.</p>                                                                                                                                                                                                                                                                                                    |
|                                                                         | It is difficult to rotate the propeller or impeller by hand.                               | <p>Clean the propeller or impeller of fibres and rags.</p> <p>Clean out the pit.</p>                                                                                                                                                                                                                                                                                                                 |
|                                                                         | The voltage is not the same on all three phases.                                           | Contact an authorised electrician.                                                                                                                                                                                                                                                                                                                                                                   |
|                                                                         | The phase currents are unbalanced or too high.                                             | Contact an authorised electrician.                                                                                                                                                                                                                                                                                                                                                                   |
|                                                                         | The insulation between the phases and between phases and earth in the stator is defective. | <p>Use an insulation resistance tester set to 1000 VDC and check that the insulation between phases and between phases and earth (ground) complies with the correct levels for the motor type.</p> <p>If necessary, contact an authorised electrician.</p>                                                                                                                                           |
|                                                                         | The density of the pumped liquid is too high. Maximum density is 1000 kg/m <sup>3</sup> .  | Dilute the liquid.                                                                                                                                                                                                                                                                                                                                                                                   |
|                                                                         | The motor protection devices are defective.                                                | Replace the defective motor protection devices.                                                                                                                                                                                                                                                                                                                                                      |

| <b>Fault</b>                                         | <b>Cause</b>                                                                  | <b>Remedy</b>                                                                                                                                                                                                    |
|------------------------------------------------------|-------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The pump does not stop.                              | The pump is not able to empty the pit to the stop level.                      | Check that the pipe connection is in order.<br>Check if the propeller or impeller clogged or jammed.<br>Check if the valves are open.                                                                            |
|                                                      | The level sensor is defective.                                                | Clean the stop sensor.<br>Check the contactor. If the contactor is defective, replace it.<br>Replace the defective components.                                                                                   |
|                                                      | The stop level is set too low.                                                | Increase the stop level.                                                                                                                                                                                         |
|                                                      |                                                                               |                                                                                                                                                                                                                  |
| The pump starts, stops and starts in rapid sequence. | The pump starts due to backflow which fills the pit to the start level again. | Check if the distance between the start and stop levels is enough.<br>Check if all the valves are functioning correctly.                                                                                         |
|                                                      | The control voltage is lower than the rated control voltage.                  | Check the contactor. If the contactor is defective, replace it.<br>Check that the voltage in the starting circuit is sufficient in relation to the rated voltage, when the pump starts (check the voltage drop). |

## 14. Technical data

### 14.1 Operating conditions

#### 14.1.1 pH value

All pumps can be used for pumping liquids with a pH value between 4 and 10.

#### 14.1.2 Liquid temperature

The allowed temperature is 0-40 °C.

#### 14.1.3 Density and viscosity of the pumped liquid

Maximum density: 1000 kg/m<sup>3</sup>.

Maximum kinematic viscosity: 1 mm<sup>2</sup>/s (1 cSt).



When pumping liquids with a density or kinematic viscosity higher than that of water (the values stated above), use a motor with a correspondingly higher output.

#### 14.1.4 Operating mode

The pumps are designed for continuous and intermittent operation. The maximum number of starts allowed per hour are shown in this table:

| Motor power<br>[kW] | Maximum number of starts<br>per hour* |
|---------------------|---------------------------------------|
| ≤ 90                | 15                                    |
| > 90 - ≤ 200        | 10                                    |
| > 200               | 10 (soft starter)                     |

\* Maximum 5000 starts per year

In order to avoid overloading the windings, seals and bearings, the above numbers of starts must not be exceeded.

#### 14.1.5 Enclosure class

IEC IP68.

#### 14.1.6 Sound pressure level

##### CAUTION

##### Sound pressure level

Minor or moderate personal injury



- Use hearing protection when working nearby an installation. Depending on the installation type, the sound pressure level of the pump can be higher than 70 dB (A).

#### 14.1.7 Turbulence optimiser (only with KPL and KWM)

Turbulence optimisation is only possible if the pump is mounted in the column pipe size that the pump is intended for.

#### 14.1.8 Storage temperature

Storage temperature: -25 to +55 °C. Maximum 70 °C for short periods not exceeding 24 hours (EN 60204-1, 4.5).

### 14.2 Dimensions and weights

For pump dimensions and weights, see data booklet on [www.grundfos.com](http://www.grundfos.com).


#### 14.2.1 Bending radius of cables

The bending radius of the cables is 15 times the outer cable diameter.


| Cable type                | Square<br>[mm <sup>2</sup> ] | Cable<br>diameter<br>[mm] | Bending<br>radius<br>[mm] |
|---------------------------|------------------------------|---------------------------|---------------------------|
| PNCT<br>6x6+1x4+6x1.5     | 6                            | 24                        | 360                       |
| PNCT<br>6x10+1x6+6x1.5    | 10                           | 34                        | 510                       |
| PNCT<br>6x16+1x10+6x1.5   | 16                           | 34                        | 510                       |
| PNCT<br>6x25+1x16+6x1.5   | 25                           | 42                        | 630                       |
| PNCT(R)<br>x35+1x25+6x1.5 | 35                           | 45                        | 675                       |
| PNCT(R) 4x70              | 70                           | 50                        | 750                       |
| PNCT(R) 4x95              | 95                           | 56                        | 840                       |
| PNCT(R) 4x120             | 120                          | 65                        | 975                       |
| PNCT(R) 4x150             | 150                          | 69                        | 1035                      |
| Sensor cable              |                              | 23                        | 345                       |

### 14.3 Minimum water levels


The curves charts below show the relation between flow rate and recommended minimum submergence (S).

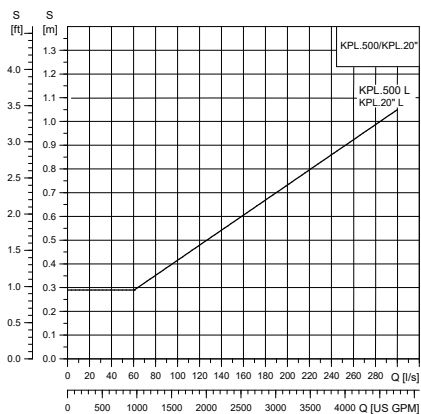


TM078864

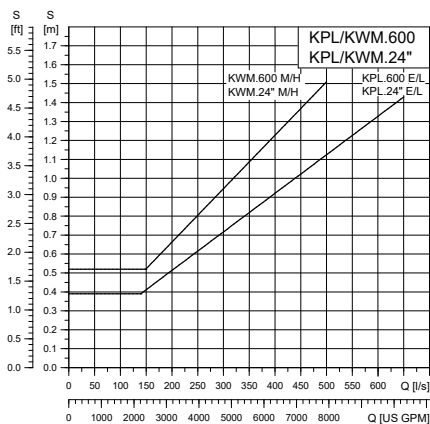





TM078865

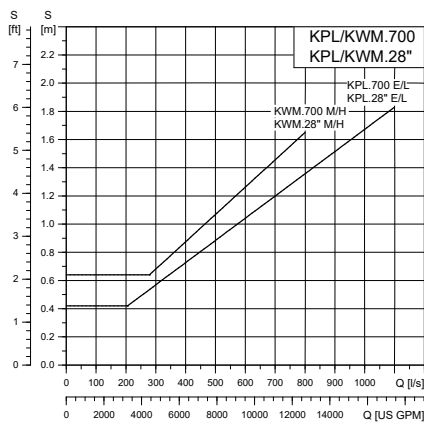


TM078866

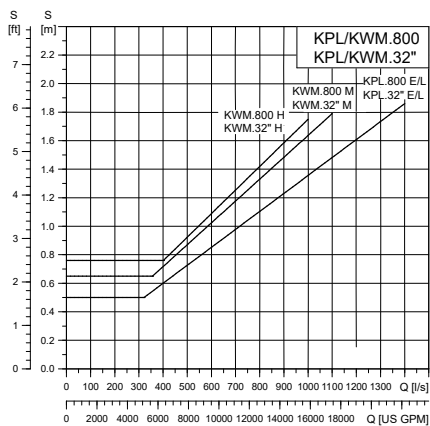


TM078867

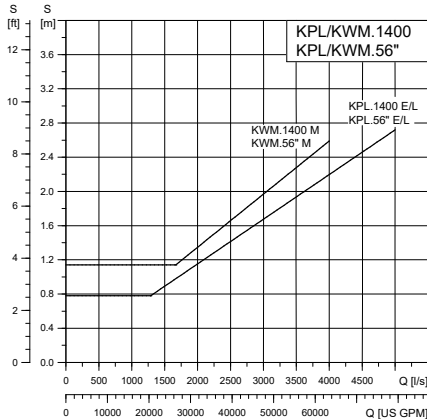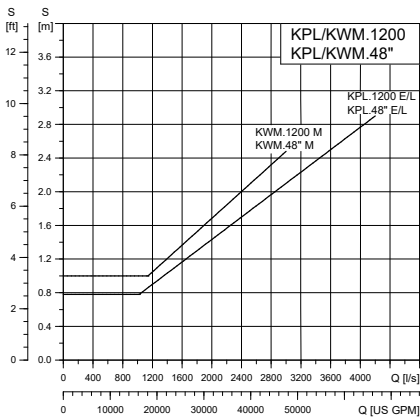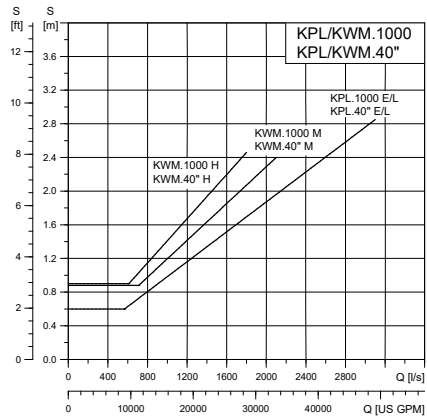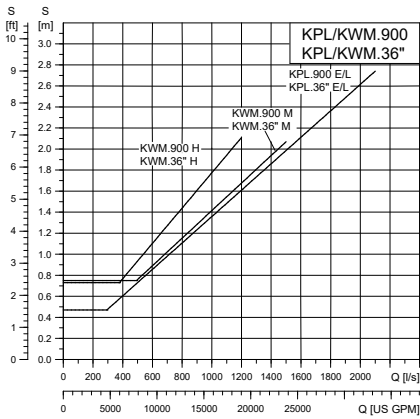


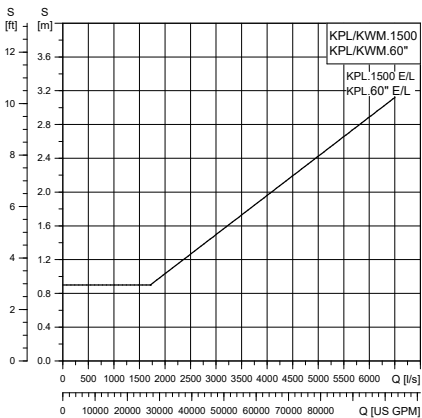

TM078872

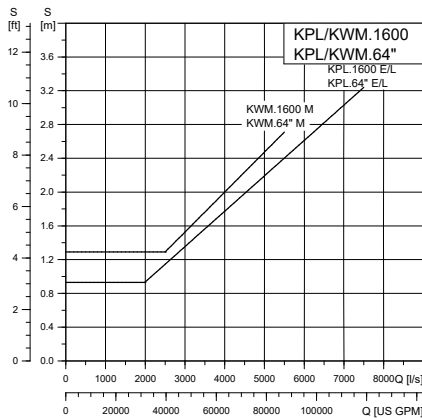


TM078873

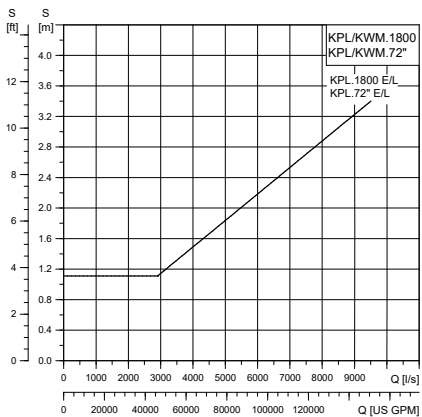

TM078874


14.3.1 KPL installation requirements

$M.W.L. = C + S$

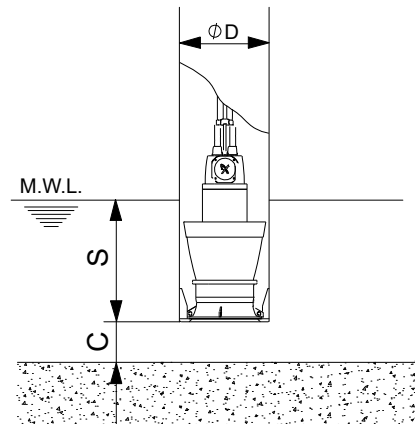

TM07 4054

Installation dimensions, KPL

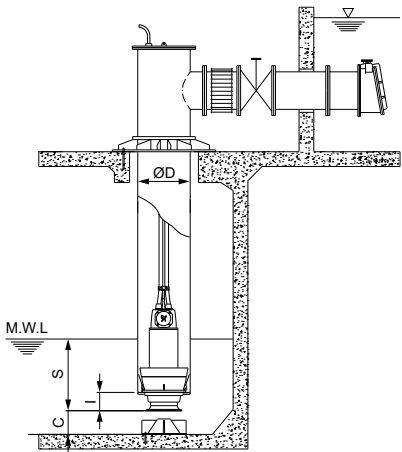

TM059455

Installation dimensions, KPL pump, ACC installed

Requirements for installation

| ØD [mm] | C [mm] |
|---------|--------|
| 500     | 250    |
| 600     | 300    |
| 650     | 325    |
| 700     | 350    |
| 800     | 400    |
| 900     | 450    |
| 1000    | 500    |
| 1200    | 600    |
| 1400    | 700    |
| 1500    | 750    |
| 1600    | 800    |
| 1800    | 900    |


### 14.3.2 KPG installation requirements

The requirements for installation are indicated in the table below. The figures show installation examples.

**Note:** All distances in the table below are minimum dimensions

All dimensions are subject to the actual site conditions or pump & gate design.

| Model    | Outlet diameter | D [mm] | E [mm] | F [mm] | G [mm] | H [mm] |
|----------|-----------------|--------|--------|--------|--------|--------|
| KPG.500  | DN 500          | 1300   | 1050   | 500    | 1600   | 2300   |
| KPG.600  | DN 600          | 1500   | 1300   | 600    | 1700   | 2500   |
| KPG.700  | DN 700          | 1600   | 1450   | 700    | 1800   | 2600   |
| KPG.800  | DN 800          | 1800   | 1800   | 800    | 2000   | 2900   |
| KPG.900  | DN 900          | 2000   | 1900   | 900    | 2200   | 3200   |
| KPG.1000 | DN 1000         | 2400   | 2100   | 1000   | 2400   | 3600   |
| KPG.1200 | DN 1200         | 2600   | 2450   | 1100   | 2800   | 3900   |
| KPG.1400 | DN 1400         | 2800   | 2700   | 1200   | 3000   | 4200   |

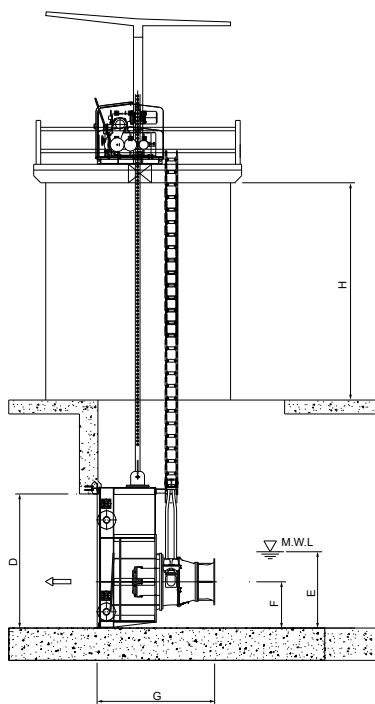


Installation dimensions, KPG

TM073741


### 14.3.3 KWM installation requirements

$$M.W.L. = C + S$$

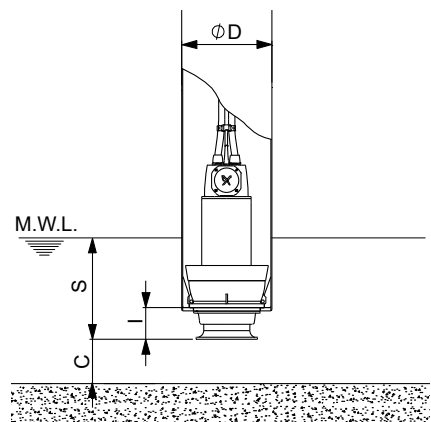

TM07 4053

Installation dimensions, KWM pump

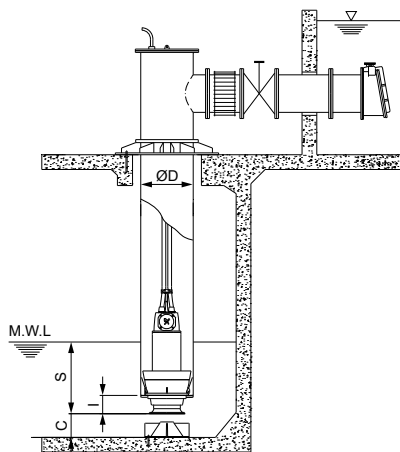

TM059455

Installation dimensions, KWM pump, ACC installed

### Requirements for installation

| ØD [mm] | C [mm] | I [mm] |
|---------|--------|--------|
| 600M    | 300    | 280    |
| 600H    | 300    | 270    |
| 700M    | 350    | 384    |
| 700H    | 350    | 400    |
| 800M    | 400    | 440    |
| 800H    | 400    | 425    |
| 900M    | 450    | 575    |
| 900H    | 450    | 428    |
| 1000M   | 500    | 610    |
| 1000H   | 500    | 580    |
| 1200    | 600    | 740    |
| 1400    | 700    | 835    |
| 1600    | 800    | 940    |

## 15. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out whee bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste

disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information on  
[www.grundfos.com/products/product-sustainability/  
product-recycling](http://www.grundfos.com/products/product-sustainability/product-recycling).

**Argentina**

Bombas GRUNDFOS de Argentina S.A.  
Ruta Panamericana km. 37.500 Industrias  
1619 - Garin Pcia. de B.A.  
Tel.: +54-3327 414 444  
Fax: +54-3327 45 3190

**Australia**

GRUNDFOS Pumps Pty. Ltd.  
P.O. Box 2040  
Regency Park  
South Australia 5942  
Tel.: +61-8-8461-4611  
Fax: +61-8-8340-0155

**Austria**

GRUNDFOS Pumpen Vertrieb  
Ges.m.b.H.  
Grundfosstraße 2  
A-5082 Grödig/Salzburg  
Tel.: +43-6246-883-0  
Fax: +43-6246-883-30

**Belgium**

N.V. GRUNDFOS Bellux S.A.  
Boommesteinweg 81-83  
B-2630 Aartselaar  
Tel.: +32-3-870 7300  
Fax: +32-3-870 7301

**Bosnia and Herzegovina**

GRUNDFOS Sarajevo  
Zmaja od Bosne 7-7A  
BiH-71000 Sarajevo  
Tel.: +387 33 592 480  
Fax: +387 33 590 465  
www.ba.grundfos.com  
E-mail: grundfos@bih.net.ba

**Brazil**

BOMBAS GRUNDFOS DO BRASIL  
Av. Humberto de Alencar Castelo  
Branco, 630  
CEP 09850 - 300  
São Bernardo do Campo - SP  
Tel.: +55-11 4393 5533  
Fax: +55-11 4343 5015

**Bulgaria**

Grundfos Bulgaria EOOD  
Slatina District  
Iztocna Tangenta street no. 100  
BG - 1592 Sofia  
Tel.: +359 2 49 22 200  
Fax: +359 2 49 22 201  
E-mail: bulgaria@grundfos.bg

**Canada**

GRUNDFOS Canada inc.  
2941 Brighton Road  
Oakville, Ontario  
L6H 6C9  
Tel.: +1-905 829 9533  
Fax: +1-905 829 9512

**China**

GRUNDFOS Pumps (Shanghai) Co. Ltd.  
10F The Hub, No. 33 Suhong Road  
Minhang District  
Shanghai 201106 PRC  
Tel.: +86 21 612 252 22  
Fax: +86 21 612 253 33

**Columbia**

GRUNDFOS Colombia S.A.S.  
Km 1.5 vía Siberia-Cota Conj. Potrero  
Chico,  
Parque Empresarial Arcos de Cota Bod.  
1A.  
Cota, Cundinamarca  
Tel.: +57(1)-2913444  
Fax: +57(1)-8764586

**Croatia**

GRUNDFOS CROATIA d.o.o.  
Buzinski prilaz 38, Buzin  
HR-10010 Zagreb  
Tel.: +385 1 6595 400  
Fax: +385 1 6595 499  
www.hr.grundfos.com

**Czech Republic**

GRUNDFOS Sales Czechia and Slovakia  
s.r.o.  
Čajkovského 21  
779 00 Olomouc  
Tel.: +420-585-716 111

**Denmark**

GRUNDFOS DK A/S  
Martin Bachs Vej 3  
DK-8850 Bjerringbro  
Tel.: +45-87 50 50 50  
Fax: +45-87 50 51 51  
E-mail: info\_GDK@grundfos.com  
www.grundfos.com/DK

**Estonia**

GRUNDFOS Pumps Eesti OÜ  
Peterburi tee 92G  
11415 Tallinn  
Tel.: + 372 606 1690  
Fax: + 372 606 1691

**Finland**

OY GRUNDFOS Pumput AB  
Truukkikuja 1  
FI-01360 Vantaa  
Tel.: +358-(0) 207 889 500

**France**

Pompes GRUNDFOS Distribution S.A.  
Parc d'Activités de Chesnes  
57, rue de Malacombe  
F-38290 St. Quentin Fallavier (Lyon)  
Tel.: +33-4 74 82 15 15  
Fax: +33-4 74 94 10 51

**Germany**

GRUNDFOS GMBH  
Schlüterstr. 33  
40699 Erkrath  
Tel.: +49-(0) 211 929 69-0  
Fax: +49-(0) 211 929 69-3799  
E-mail: infoservice@grundfos.de  
Service in Deutschland:  
kundendienst@grundfos.de

**Greece**

GRUNDFOS Hellas A.E.B.E.  
20th km. Athinon-Markopoulou Av.  
P.O. Box 71  
GR-19002 Peania  
Tel.: +0030-210-66 83 400  
Fax: +0030-210-66 46 273

**Hong Kong**

GRUNDFOS Pumps (Hong Kong) Ltd.  
Unit 1, Ground floor, Siu Wai Industrial  
Centre  
29-33 Wing Hong Street & 68 King Lam  
Street, Cheung Sha Wan  
Kowloon  
Tel.: +852-27861706 / 27861741  
Fax: +852-27858664

**Hungary**

GRUNDFOS Hungária Kft.  
Tópark u. 8  
H-2045 Törökbálint  
Tel.: +36-23 511 110  
Fax: +36-23 511 111

**India**

GRUNDFOS Pumps India Private Limited  
118 Old Mahabalipuram Road  
Thoraipakkam  
Chennai 600 097  
Tel.: +91-44 2496 6800

**Indonesia**

PT GRUNDFOS Pompa  
Graha intirub Lt. 2 & 3  
Jln. Cililitan Besar No.454. Makasar,  
Jakarta Timur  
ID-Jakarta 13650  
Tel.: +62 21-469-51900  
Fax: +62 21-460 6910 / 460 6901

**Ireland**

GRUNDFOS (Ireland) Ltd.  
Unit A, Merrywell Business Park  
Ballymount Road Lower  
Dublin 12  
Tel.: +353-1-4089 800  
Fax: +353-1-4089 830

**Italy**

GRUNDFOS Pompe Italia S.r.l.  
Via Gran Sasso 4  
I-20060 Truccazzano (Milano)  
Tel.: +39-02-95838112  
Fax: +39-02-95309290 / 95838461

**Japan**

GRUNDFOS Pumps K.K.  
1-2-3, Shin-Miyakoda, Kita-ku  
Hamamatsu  
431-2103 Japan  
Tel.: +81 53 428 4760  
Fax: +81 53 428 5005

**Kazakhstan**

Grundfos Kazakhstan LLP  
7' Kyz-Zhibek Str., Kok-Tobe micr.  
KZ-050020 Almaty Kazakhstan  
Tel.: +7 (727) 227-98-55/56

**Korea**

GRUNDFOS Pumps Korea Ltd.  
6th Floor, Aju Building 679-5  
Yeoksam-dong, Kangnam-ku, 135-916  
Seoul, Korea  
Tel.: +82-2-5317 600  
Fax: +82-2-5633 725

**Latvia**

SIA GRUNDFOS Pumps Latvia  
Deglava biznesa centrs  
Augusta Deglava iela 60  
LV-1035, Rīga,  
Tel.: + 371 714 9640, 7 149 641  
Fax: + 371 914 9646

**Lithuania**

GRUNDFOS Pumps UAB  
Smolensko g. 6  
LT-03201 Vilnius  
Tel.: +370 52 395 430  
Fax: +370 52 395 431

**Malaysia**

GRUNDFOS Pumps Sdn. Bhd.  
7 Jalan Peguam UI/25  
Glenmarie Industrial Park  
40150 Shah Alam, Selangor  
Tel.: +60-3-5569 2922  
Fax: +60-3-5569 2866

**Mexico**

Bombas GRUNDFOS de México  
S.A. de C.V.  
Boulevard TLC No. 15  
Parque industrial Stiva Aeropuerto  
Apodaca, N.L. 66600  
Tel.: +52-81-8144 4000  
Fax: +52-81-8144 4010

**Netherlands**

GRUNDFOS Netherlands  
Veluwezoom 35  
1326 AE Almere  
Postbus 22015  
1302 CA ALMERE  
Tel.: +31-88-478 6336  
Fax: +31-88-478 6332  
E-mail: info\_gnl@grundfos.com

**New Zealand**

GRUNDFOS Pumps NZ Ltd.  
17 Beatrice Tinsley Crescent  
North Harbour Industrial Estate  
Albany, Auckland  
Tel.: +64-9-415 3240  
Fax: +64-9-415 3250

**Norway**

GRUNDFOS Pumper A/S  
Strømsveien 344  
Postboks 235, Leirdal  
N-1011 Oslo  
Tel.: +47-22 90 47 00  
Fax: +47-22 32 21 50

**Poland**

GRUNDFOS Pompy Sp. z o.o.  
ul. Klonowa 23  
Baranowo k. Poznań  
PL-62-081 Przeźmierowo  
Tel.: (+48-61) 650 13 00  
Fax: (+48-61) 650 13 50

**Portugal**

Bombas GRUNDFOS Portugal, S.A.  
Rua Calvet de Magalhães, 241  
Apartado 1079  
P-2770-153 Paço de Arcos  
Tel.: +351-21-440 76 00  
Fax: +351-21-440 76 90

**Romania**

GRUNDFOS Pompe România SRL  
S-PARK BUSINESS CENTER, Clădirea  
A2, etaj 2  
Str. Tipografilor, Nr. 11-15, Sector 1, Cod  
013714  
București, Romania  
Tel.: 004 021 2004 100  
E-mail: romania@grundfos.ro

**Serbia**

Grundfos Srbija d.o.o.  
Ormladinskih brigada 90b  
11070 Novi Beograd  
Tel.: +381 11 2258 740  
Fax: +381 11 2281 769  
www.rs.grundfos.com

**Singapore**

GRUNDFOS (Singapore) Pte. Ltd.  
25 Jalan Tukang  
Singapore 619264  
Tel.: +65-6681 9688  
Fax: +65-6681 9689

**Slovakia**

GRUNDFOS s.r.o.  
Prievozská 4D 821 09 BRATISLAVA  
Tel.: +421 2 5020 1426  
sk.grundfos.com

**Slovenia**

GRUNDFOS LJUBLJANA, d.o.o.  
Leskoškova 9e, 1122 Ljubljana  
Tel.: +386 (0) 1 568 06 10  
Fax: +386 (0) 1 568 06 19  
E-mail: tehnika-si@grundfos.com

**South Africa**

GRUNDFOS (PTY) LTD  
16 Lascelles Drive, Meadowbrook Estate  
1609 Germiston, Johannesburg  
Tel.: (+27) 10 248 6000  
Fax: (+27) 10 248 6002  
E-mail: lgradidge@grundfos.com

**Spain**

Bombas GRUNDFOS España S.A.  
Camino de la Fuentequilla, s/n  
E-28110 Algete (Madrid)  
Tel.: +34-91-848 8800  
Fax: +34-91-628 0465

**Sweden**

GRUNDFOS AB  
Box 333 (Lunnagårdsgatan 6)  
431 24 Mölndal  
Tel.: +46 31 332 23 000  
Fax: +46 31 331 94 60

**Switzerland**

GRUNDFOS Pumpen AG  
Bruggacherstrasse 10  
CH-8117 Fällanden/ZH  
Tel.: +41-44-806 8111  
Fax: +41-44-806 8115

**Taiwan**

GRUNDFOS Pumps (Taiwan) Ltd.  
7 Floor, 219 Min-Chuan Road  
Taichung, Taiwan, R.O.C.  
Tel.: +886-4-2305 0868  
Fax: +886-4-2305 0878

**Thailand**

GRUNDFOS (Thailand) Ltd.  
92 Chaloe Phrakiat Rama 9 Road  
Dokmai, Pravej, Bangkok 10250  
Tel.: +66-2-725 8999  
Fax: +66-2-725 8998

**Turkey**

GRUNDFOS POMPA San. ve Tic. Ltd.  
Stl.  
Gebze Organize Sanayi Bölgesi  
İhsan dede Caddesi  
2. yol 200, Sokak No. 204  
41490 Gebze/ Kocaeli  
Tel.: +90 - 262-679 7979  
Fax: +90 - 262-679 7905  
E-mail: satis@grundfos.com

**Ukraine**

ТОВ "ГРУНДФОС УКРАЇНА"  
Бізнес Центр Європа  
Столичне шосе, 103  
м. Київ, 01313, Україна  
Tel.: (+38 044) 237 04 00  
Fax: (+38 044) 237 04 01  
E-mail: ukraine@grundfos.com

**United Arab Emirates**

GRUNDFOS Gulf Distribution  
P.O. Box 16768  
Jebel Ali Free Zone, Dubai  
Tel.: +971 4 8815 166  
Fax: +971 4 8815 136

**United Kingdom**

GRUNDFOS Pumps Ltd.  
Grovebury Road  
Leighton Buzzard/Beds. LU7 4TL  
Tel.: +44-1525-850000  
Fax: +44-1525-850011

**U.S.A.**

Global Headquarters for WU  
856 Koomey Road  
Brookshire, Texas 77423 USA  
Phone: +1-630-236-5500

**Uzbekistan**

Grundfos Tashkent, Uzbekistan  
The Representative Office of Grundfos  
Kazakhstan in Uzbekistan  
38a, Oybek street, Tashkent  
Tel.: (+998) 71 150 3290 / 71 150 3291  
Fax: (+998) 71 150 3292

|                         |
|-------------------------|
| <b>96770326</b> 03.2024 |
|-------------------------|

|              |
|--------------|
| ECM: 1386448 |
|--------------|